

DTM-600

Installation Guide

Thank you for purchasing our product. If you have any questions or need assistance, please contact the dealer.

Disclaimer

No part of this manual may be copied, reproduced, translated, or distributed in any form or by any means without prior written consent from Digital Ally.

The manual may be updated from time to time due to version upgrade or other reasons.

The manual is for reference only. All the statements, information, and suggestions contained herein do not constitute warranties of any kind, express or implied.

Conventions

- The figures, charts or photos in this manual are used for illustration only, which may differ from the actual product.
- Subject to uncertain factors such as the physical environment, actual values of some data may differ from the reference values described herein. In case of any doubt or dispute, the right of final interpretation resides with Digital Ally.
- Follow this manual when using the product. Professional guidance is recommended.
- Notational conventions used in this document are described as follows:

Format	Description
Boldface	Indicates buttons, menus, tabs, window names, dialog names, and parameter names. For example, click OK or select Device Management .
" "	Indicates messages. For example, "Hanging Up" is displayed on the interface.
>	Directs you to go to a multi-level menu. For example, go to Device Management > Add Device . In this example, Add Device is a submenu under Device Management .

- The symbols in the following table may be found in this manual. Carefully follow the instructions indicated by the symbols to avoid hazardous situations and use the product properly.

Symbol	Description
 WARNING!	Contains important safety instructions and indicates situations that could cause bodily injury.
 CAUTION!	Means reader be careful and improper operations may cause damage or malfunction to product.
 NOTE!	Means useful or supplemental information about the use of product.

Contents

1 Overview	4
1.1 Features	4
2 Engineering Safety Precautions	5
3 Installation Preparations	5
3.1 Installation Tools	5
4 Overview of Wrist Temperature Measurement Module	8
4.1 Appearance and Size	8
4.2 Structure and Cable	8
4.3 Accompanying Accessories	9
4.4 Engineering Wiring	9
4.5 Brackets.....	10
4.5.1 Wall-mounted Bracket.....	10
4.5.2 Side-mounted Bracket	11
5 Installation of the Wrist Temperature Measurement Module	12
5.1 Installation Precautions	12
5.2 Standing Pole Mount	13
5.3 Wall Mount	14
6 Installation of the Wrist Temperature Measurement Module of Face Recognition Terminal.....	17
6.1 Standing Pole Mount	17
6.2 Installation to a Gate Machine.....	18
7 Parameter Configuration.....	20
7.1 Parameter Configuration on Web.....	20
7.1.1 Device Startup and Login	20
7.1.2 Enabling Temperature Measurement	21
7.1.3 Enabling Mask Detection	21
7.1.4 Configuring a Check Template	22
7.2 Parameter Configuration on the GUI Touchscreen.....	23
8 Appendix	24
8.1 Labels	24
8.2 Standing Pole Bracket Slide.....	25
8.2.1 Dimensions of a Standing Pole Bracket Slide.....	25
8.2.2 Installation Positions of a Standing Pole Bracket Slide	25
8.2.3 Installation of the Standing Pole Bracket Slide for Face Recognition Access Control Terminal	26
8.2.4 Installation of the Expansion Bracket for Face Recognition Terminal	27
8.3 Standing Pole Bracket Base.....	28
8.3.1 Dimensions of a Standing Pole Bracket Base	28
8.3.2 Installation of the Standing Pole Bracket Base	29

1 Overview

A wrist temperature measurement module is a non-contact device for taking wrist temperatures. It has a simple and elegant appearance and features a wide range, high precision, low error, and long temperature measurement distance. It can connect to a face recognition terminal through the RS485 interface. The module supports temperature measurement and personnel information binding. It is capable of rapidly identifying personnel information, taking the temperature, and generating an alarm for people with abnormal temperature. In addition, it allows setting a temperature threshold so as to strictly control the access permissions of personnel (a person is not allowed to pass when the person's temperature exceeds the threshold). The module is applicable to application scenes requiring strict temperature measurement such as access control and attendance check.

This document provides introduction to wrist temperature measurement modules and guidance on the wiring.

1.1 Features

- Liveness detection, mask detection, and temperature measurement
- Face metering, human metering, and intelligent metering, as well as quick adaptation to ambient light, effectively improving the recognition efficiency under strong backlight
- Accurate face recognition of people in the whitelist with masks
- Plug-and-play, standalone running with network disconnected, simple and rapid deployment, allowing temporary and mobile deployment
- User-friendly interaction, real-time temperature display on the GUI, real-time voice prompt, and voice alarms for abnormal temperatures, enabling inspectors to rapidly respond
- Non-contact recognition, avoiding contact infection
- Binding of personnel information, face photos, and body temperatures, quickly identifying personnel and temperatures, and enabling record storage and export
- Built-in chip dedicated for deep learning, allowing local and offline recognition
- Multiple authentication modes available: face scan, ID card verification, ID card verification + ID card whitelist, card swiping (IC card reader connected), as well as card swiping (IC card reader connected) + face scan

2 Engineering Safety Precautions

- Construction personnel need to wear antistatic wrist straps or gloves as required before carrying out construction work.
- Do not work on an electrified device to ensure safe electricity use.
- Prevent exposed wire ends during construction. Strictly insulate and wrap the wiring sections.
- During on-site installation, avoid poor cable contact caused by long-term stress, and do not excessively bend tail cables (including power cables and network interface cables).
- The device must be placed or installed stably and reliably and cannot fall.
- The device must be correctly installed before it can be powered on and used. Incorrect connection may cause personal injury and damage to the device components.
- The device must be disconnected from the power supply before it can be moved to prevent electric shock.
- The device must be away from water and other liquids to prevent damage to the device and risks of electric shock, fire, etc.
- Use a power outlet with a protective earth connection.
- For a device with grounding requirements, ground it in accordance with the regulations.
- Strictly comply with local electrical safety standards.
- The voltage must be stable and within the rated input and output range, and meet the power supply requirements of the device. The overall power must be greater than the sum of the designed maximum power of the device.
- The device must be placed or installed in a place with the temperature, humidity, dust, corrosive gas, electromagnetic radiation and other indicators meeting the requirements of the device.

3 Installation Preparations

3.1 Installation Tools

The table below lists the tools required in the installation.

Table 3-1 Installation Tools


Tool	Picture
Hex key	 Used to loosen or fasten hex socket screws.
Precision maintenance electronic kit	 With 33 or more parts for wiring.
Antistatic wrist strap or antistatic gloves	
Marker	There is no special requirement.
Measuring tape	 Used to measure dimensions.
Glue gun and silicone sealant	 Used for water prevention at the bottom of face recognition terminals. TONSAN 1587 is recommended.

Drill 3–10mm drill bit kit	 Used to drill holes. Note: The drill bits must be able to drill on stainless steel.
Multimeter	 Used for measuring the voltage and current.
Power adapter (DC 12V 2A)	 Used to connect to the power supply and power the module.
Network cables	Cat 5e or better cables need to be used.

4 Overview of Wrist Temperature Measurement Module


4.1 Appearance and Size

Figure 4-1 Appearance and Size of OEP-BTS1

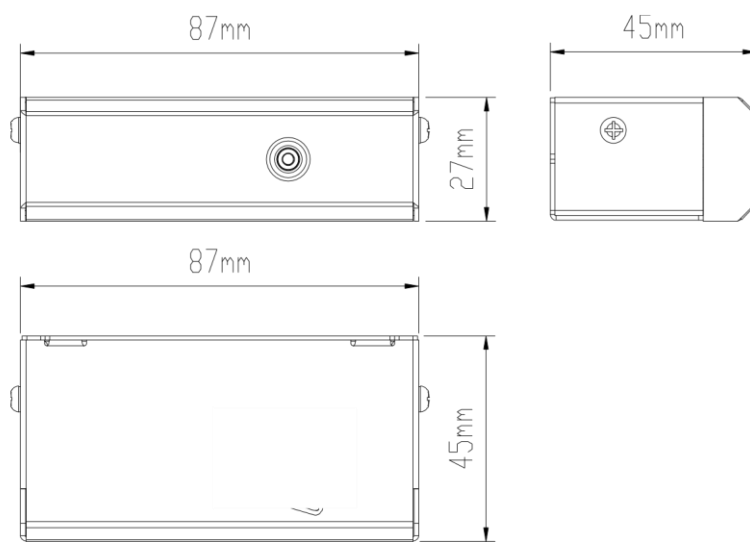

4.2 Structure and Cable

Figure 4-2 Structure and Cable

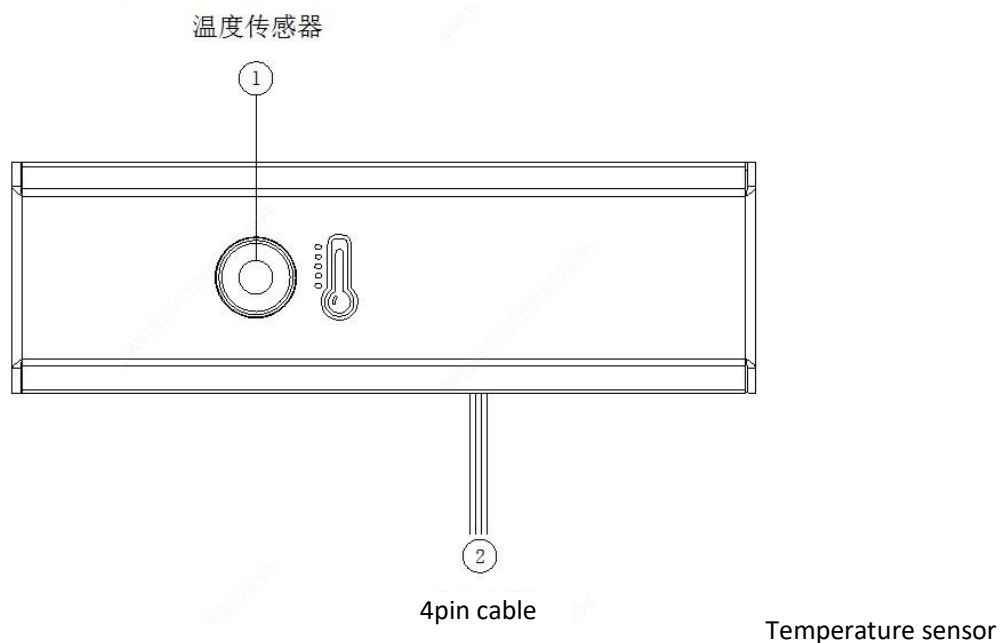


4.3 Accompanying Accessories

Item	Name	Quantity	Unit
1	Digital temperature measurement module	1	PCS
2	Screw kit (including two M3x6 countersunk head screws, and two M3x6 pan head screws, BOM 2603C01J)	1	Bag
3	Power adapter (purchased separately)	1	PCS
4	Side-mounted bracket	1	PCS
5	Hint label	3	PCS
6	User manual	1	Set

4.4 Engineering Wiring

Figure 4-3 Wiring Schematic Diagram

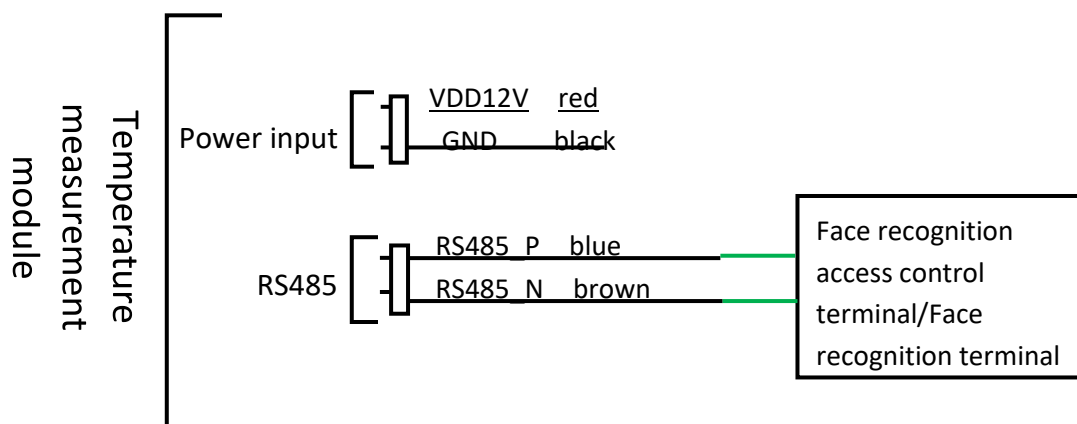

Note: Before installing the digital temperature measurement module, plan the layout of the power cable. For the diameter selection for the extension power cable, see the table below. Table 4-1 Diameter Selection for Extension Power Cables

The device is powered by DC 12V/2A and the lower limit of the operating voltage is DC 9V (12V–25%).				
Wire Diameter (mm)	0.8mm (20 AWG)	1mm (18 AWG)	1.25mm (16 AWG)	1.63mm (14 AWG)
Transmission Distance (m)	18	37	58	99


CAUTION!


Cable connection requirements:

- The 4-pin cable needs to be adjusted properly based on the actual scenario.
- Cables need to pass the continuity check before they are laid out.
- Cables need to be routed naturally and straight, without cross-winding or knotting, and the traction should be balanced.
- Cable connection points and terminals should be numbered uniformly and marked permanently, and labels should be set at both ends of a cable.
- The bending radius of a multi-core cable should be greater than 6 times its outer diameter, and the bending radius of a 4-pair network data cable should be greater than 4 times its outer diameter.

4.5 Brackets


4.5.1 Wall-mounted Bracket

Figure 4-4 Wall-mounted Bracket of a Wrist Temperature Measurement Module

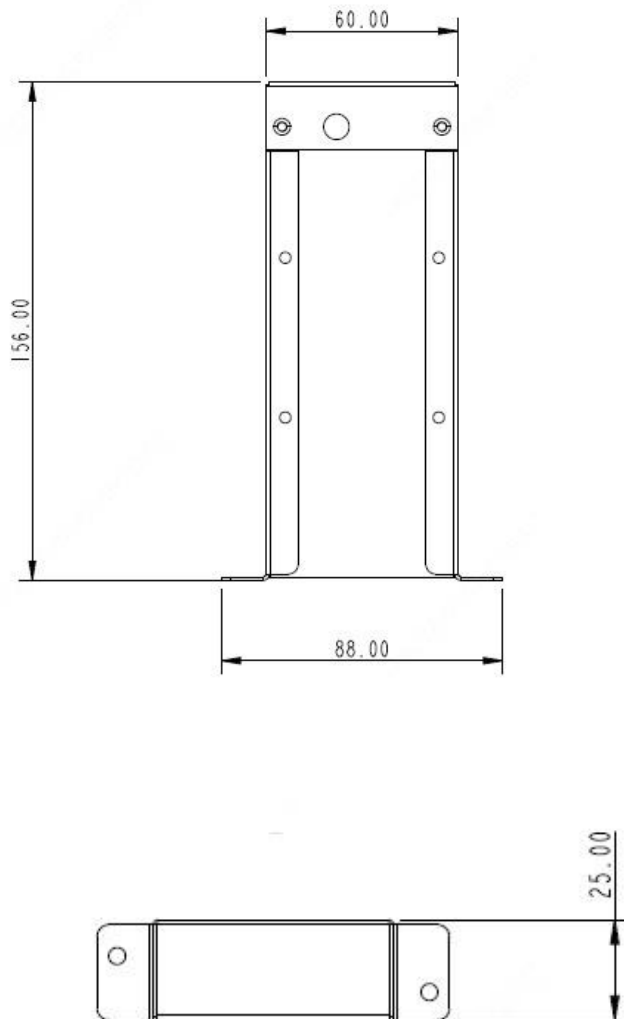

4.5.2 Side-mounted Bracket

Figure 4-5 Side-mounted Bracket of a Wrist Temperature Measurement Module

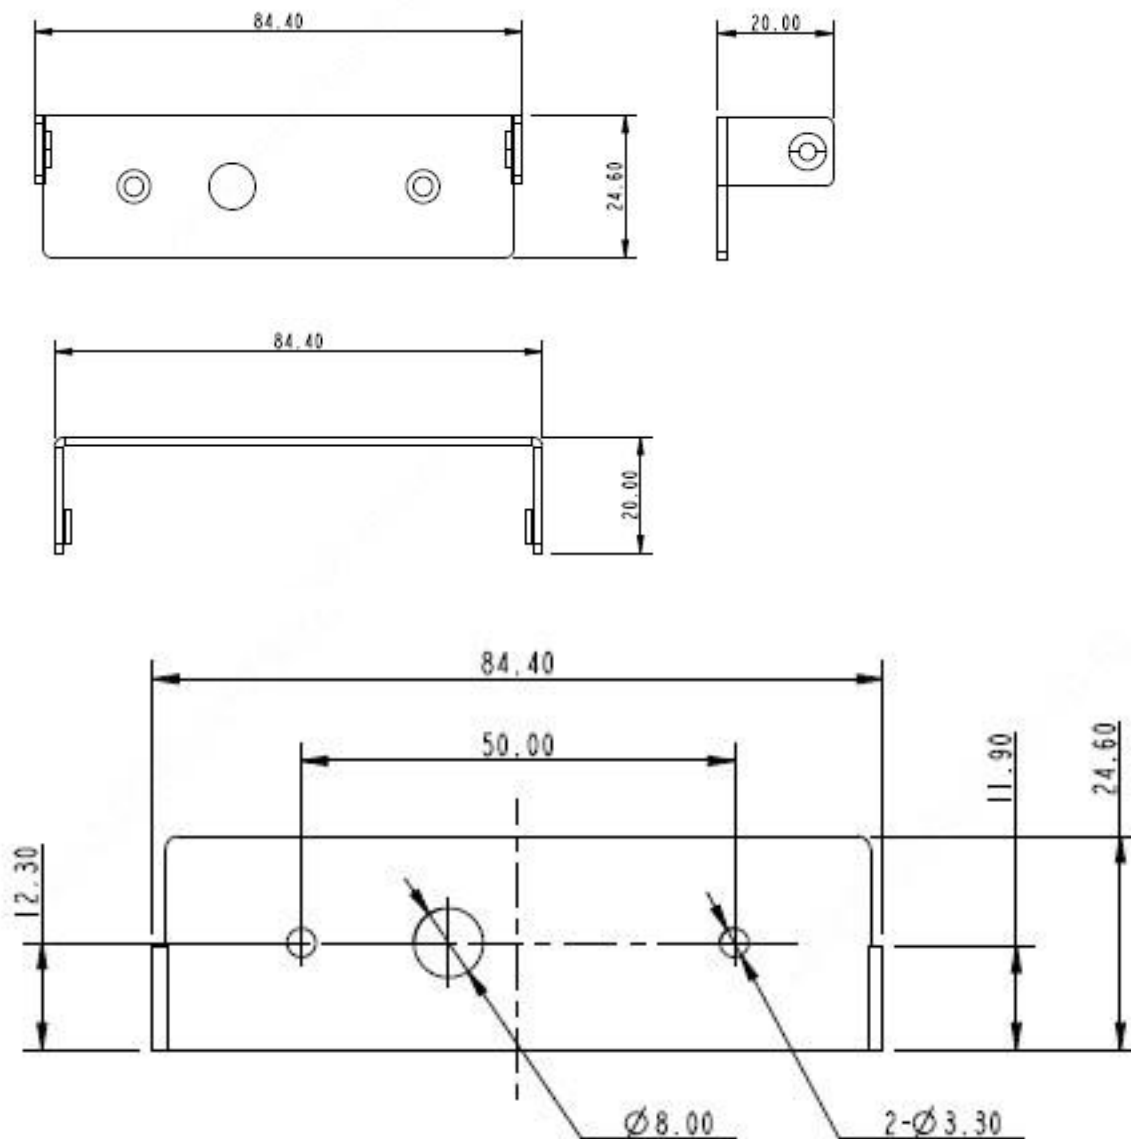


5 Installation of the Wrist Temperature Measurement Module

5.1 Installation Precautions

- Before installation, check the power and communication conditions at the site to avoid pipes inside or on the wall during construction.
- For wall mount, measure the dimensions of the installation wall to check whether there is space for installation, and check the wall material and wall repair before grooving.
- Arrange tail cables in order during installation to avoid bending, winding, and crushing damage. Wrap tail cables of the temperature measurement module with insulation tape to prevent damage during the installation.
- Do not install the temperature measurement module with the temperature measurement hole facing upward, and protect the hole from foreign matters, dust, and other contamination.
- A temperature measurement module is a precision device. Be sure to handle it gently during transportation, and never install it forcibly to avoid incidental damage.

5.2 Standing Pole Mount

Step 1 Determine the standing pole mount holes. The standing pole provides two installation positions (at heights of 900mm and 1093mm, respectively) for a wrist temperature measurement module. Select the position based on actual situation.

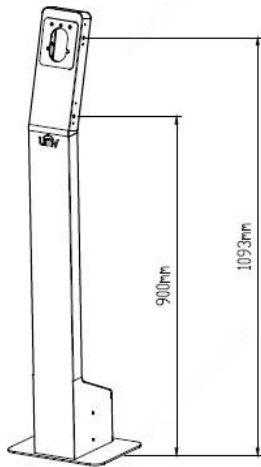


Step 2 Install the wrist temperature measurement module bracket to the standing pole.

Method 1 **Fix to the 900mm position.**

Screws: two M3x6 countersunk head screws

Operation: Use two countersunk head screws to fix the wrist temperature measurement module bracket to the right side of the standing pole. You can select the installation position based on the on-site situation.

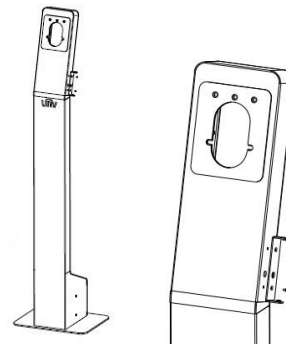


Step 2 Install the wrist temperature measurement module bracket to the standing pole.

Method 2 Fix to the 1093mm position.

Screws: two M3x6 pan head screws

Operation: Use the screws to fix the wrist temperature measurement module bracket to the right side of the standing pole. You can select the installation position based on the on-site situation.

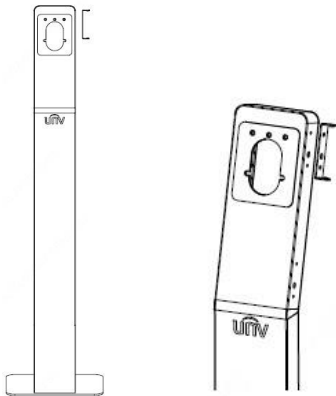


Step 3 Fix the wrist temperature measurement module.

Screws: two M3x6 pan head screws

Operation: Use two pan head screws to fix the wrist temperature measurement module to the bracket at the right side of the standing pole.

Fixing the Wrist Temperature Measurement Module Installation Completed

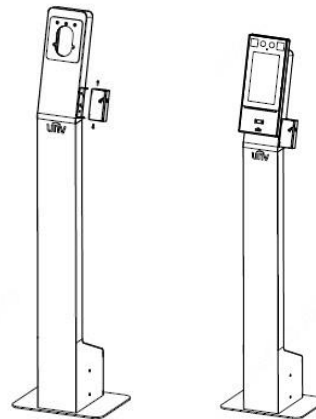

5.3 Wall Mount

Note: The wall-mounted bracket for EP-SZWB needs to be purchased separately, and the BOM code is 2115C0EV.


1. Solution 1 (temperature measurement hole facing downward)

Step 1

Fix the wrist temperature measurement module.

Screws: two M3x6 pan head screws and two M3x6 countersunk head screws

Operation: Use the countersunk head screws to fix the wall-mounted bracket and side-mounted bracket, and then use the pan head screws to fix the device to the side-mounted bracket.

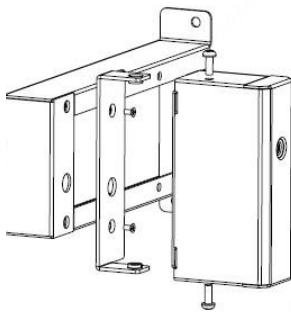

Step 2

Install the wall-mounted bracket.

Screws: two ST3.5x25 countersunk head self-tapping screws

Operation: Use the self-tapping screws to fix the wall-mounted bracket to the proper position on the wall determined as required.

Mode 1:

Mode 2:




2. Solution 2 (temperature measurement hole facing rightward)

Step 1

Fix the wrist temperature measurement module.

Screws: two M3x6 pan head screws and two M3x6 countersunk head screws

Operation: Use the countersunk head screws to fix the wall-mounted bracket and side-mounted bracket, and then use the pan head screws to fix the device to the side-mounted bracket.

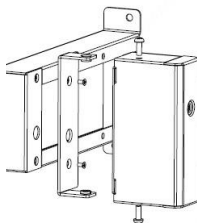


Step 2

Install the wall-mounted bracket.


Screws: two ST3.5x25 countersunk head self-tapping screws

Operation: Use the self-tapping screws to fix the wall-mounted bracket to the proper position on the wall determined as required.

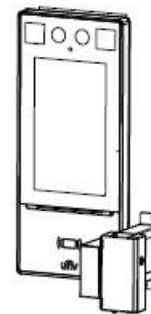

3. Solution 3 (temperature measurement hole facing forward)


- Step 1** Fix the wrist temperature measurement module.
- Screws:** two M3x6 pan head screws and two M3x6 countersunk head screws
- Operation:** Use the countersunk head screws to fix the wall-mounted bracket and side-mounted bracket, and then use the pan head screws to fix the device to the side-mounted bracket.

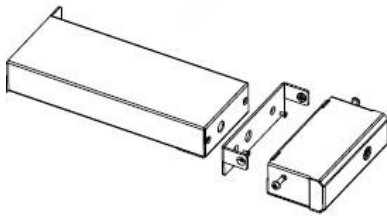

- Step 2** Install the wall-mounted bracket.
- Screws:** two ST3.5x25 countersunk head self-tapping screws
- Operation:** Use the self-tapping screws to fix the bracket to the proper position on the wall determined as required.


Mode 1:

Mode 2:

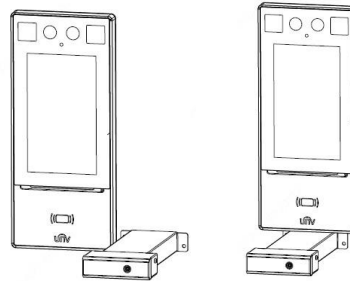


4. Solution 4 (temperature measurement hole facing forward without the wall-mounted bracket)

- Step 1** Install the side-mounted bracket.
- Screws:** two ST3.5x25 countersunk head self-tapping screws
- Operation:** Use the self-tapping screws to fix the side-mounted bracket to the proper position on the wall determined as required: Determine the installation holes as shown in the figure below, and fasten two countersunk head self-tapping screws to install the bracket.

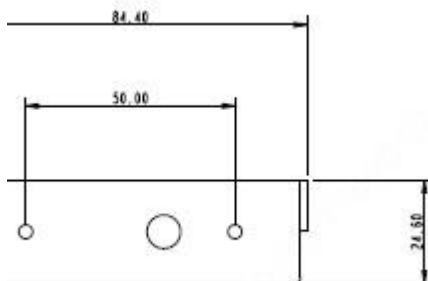

- Step 2** Fix the wrist temperature measurement module.
- Screws:** two M3x6 pan head screws
- Operation:** Insert the wrist temperature measurement module to the bracket, and use the pan head screws to fasten it at both sides.

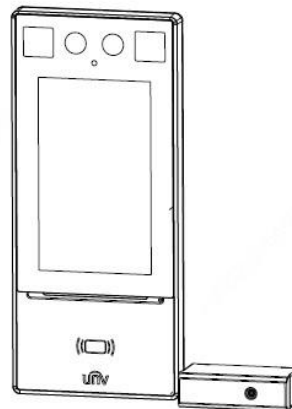


6 Installation of the Wrist Temperature Measurement Module of Face Recognition Terminal

Note: When a gate machine is used in combination, it must be connected to a face recognition terminal and support RS485 signal transmission so that it can normally interact with the wrist temperature measurement module.

6.1 Standing Pole Mount

Step 1 Determine the standing pole mount holes. The standing pole provides two installation positions (at heights of 900mm and 1093mm, respectively) for a wrist temperature measurement module. Select the position based on actual situation.

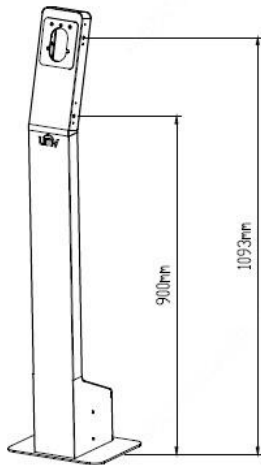

Step 2


Install the wrist temperature measurement module bracket to the standing pole.

Method 1

Fix to the 900mm position.

Screws: two M3x6 countersunk head screws


Operation: Use two countersunk head screws to fix the wrist temperature measurement module bracket to the right side of the standing pole. You can select the installation position based on the on-site situation.

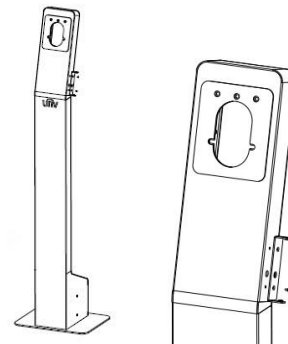

Step 2 Install the wrist temperature measurement module bracket to the standing pole.

Method 2 Fix to the 1093mm position.

Screws: two M3x6 pan head screws
Operation: Use the screws to fix the wrist temperature measurement module bracket to the right side of the standing pole. You can select the installation position based on the on-site situation.

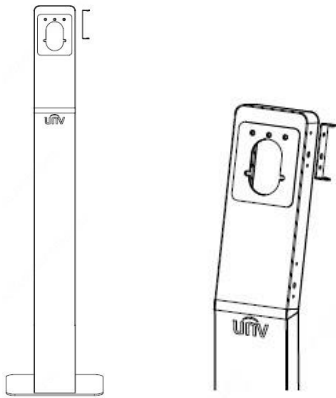


Step 3 Fix the wrist temperature measurement module.

Screws: two M3x6 pan head screws

Operation: Use two pan head screws to fix the wrist temperature measurement module to the bracket at the right side of the standing pole.

Fixing the Wrist Temperature Measurement Module Installation

Measurement Module Completed

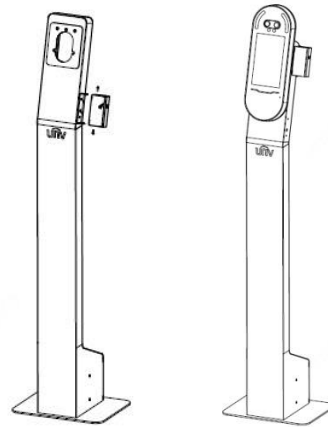

6.2 Installation to a Gate Machine


1. Solution 1 (fixing by pasting)

Recommended: Use 3M double-sided tape to paste and fix the wrist temperature measurement module to the upper cover and use insulation tape to wrap the tail cable and connect the cable to the chassis.

Step 1 Fix the wrist temperature measurement module.

Tool: 3M double -sided tape or other adhesive for fixing

Operation: Directly fix the wrist temperature measurement module to the upper cover.

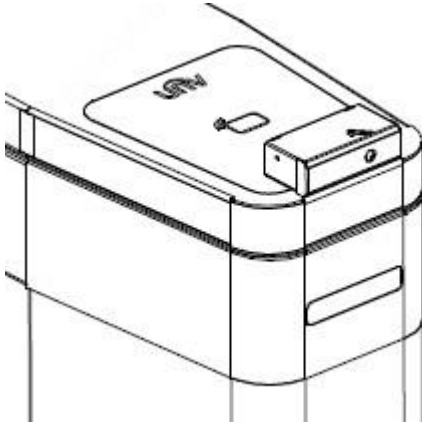


2. Solution 2 (fixing on holes)

Drill two $\phi 3.3$ holes and one $\phi 8$ hole at the side of the upper cover of the gate machine, fix the side-mounted bracket, and then install the wrist temperature measurement module.

Step 1 Drill holes on the gate machine and fix the wrist temperature measurement module bracket.

Screws: two M3x6 countersunk head screws


Operation: At the side of the upper cover of the gate machine, drill two $\phi 3.3$ holes and one $\phi 8$ hole according to the dimensions shown in [Figure 4-5](#), and use the countersunk head screws and caps to fix the wrist temperature measurement module bracket.

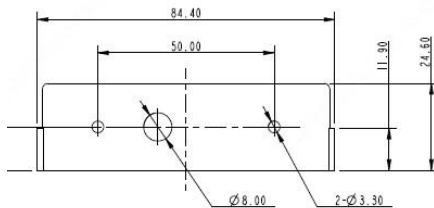

Step 2 Fix the wrist temperature measurement module to the bracket.



Screws: two M3x6 pan head screws

Operation: Insert the wrist temperature measurement module to the side-mounted bracket, and use one pan head screw to fasten it at each side.

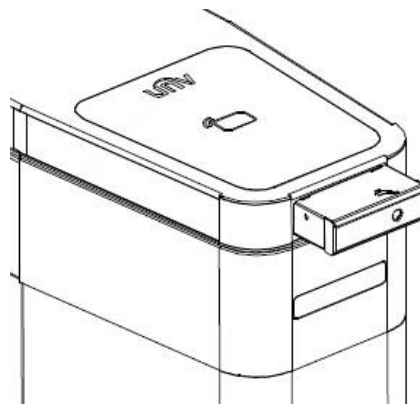

3. Solution 3 (fixing to a wall)

If there is a wall or any other surface that can be used to fix the wrist temperature measurement module next to the gate machine, install the module to the fixing surface, and cut a groove on the surface for conceal cabling or use a cable trough.

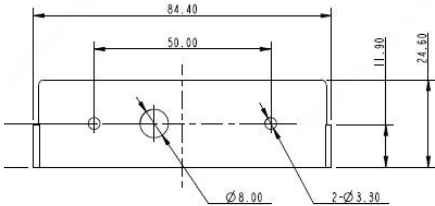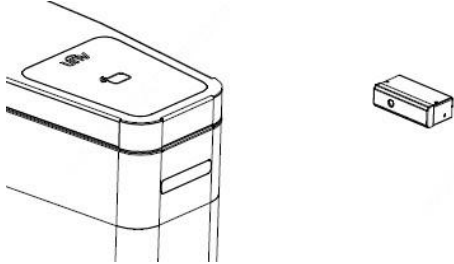Step 1 Fix the wrist temperature measurement module bracket. Screws: two ST3.5x25 countersunk head self-tapping screws Operation: Drill two $\phi 3.3$ holes on the installation surface according to the dimensions shown in Figure 4-5, and use expansion screw to install the wrist temperature measurement module bracket. 	Step 2 Fix the wrist temperature measurement module to the bracket. Screws: two M3x6 pan head screws Operation: Insert the wrist temperature measurement module to the side-mounted bracket, and use one pan head screw to fasten it at each side. 
--	--

7 Parameter Configuration

7.1 Parameter Configuration on Web

7.1.1 Device Startup and Login

After the device is installed, connect it to a DC 12V power supply and start the device. The device screen will light up, indicating that the device is started successfully. (For a device in the access control terminal series, the activation password needs to be configured for initial activation.) Log in to the Web interface of the device via network connection, to manage and maintain the device.

1. On a client PC, open the Internet Explorer, and enter the IP address of the device 192.168.1.13 (subnet mask: 255.255.255.0) into the address bar.
2. In the login dialog box, enter the username (**admin** by default) and password (**123456** by default, or the activation password if configured), and click **Login** to access the Web interface.


NOTE!

- Internet Explorer needs to be used.
- DHCP is enabled by default. If a DHCP server is used in the network environment, an IP address may be dynamically assigned to the device. Log in with the actual IP address.
- At initial login, the system will prompt you to install a plugin. Close all browsers when installing the plugin. Follow instructions on the page to complete the plugin installation, and then restart the Internet Explorer to log in to the system.
- The default password of this product is used only for initial login. You are required to change the default password after initial login to ensure security. It is strongly recommended that the password be set to a stronger one with no less than eight characters.

7.1.2 Enabling Temperature Measurement

Log in to the Web interface of the device, choose **Setup > Intelligent > Advanced Setting**, select **Temperature Measurement**, and set **Temperature Measurement**, **Temperature Measurement Range**, and **Temperature Alarm Threshold** as required.

Figure 7-1 Enabling Temperature Measurement

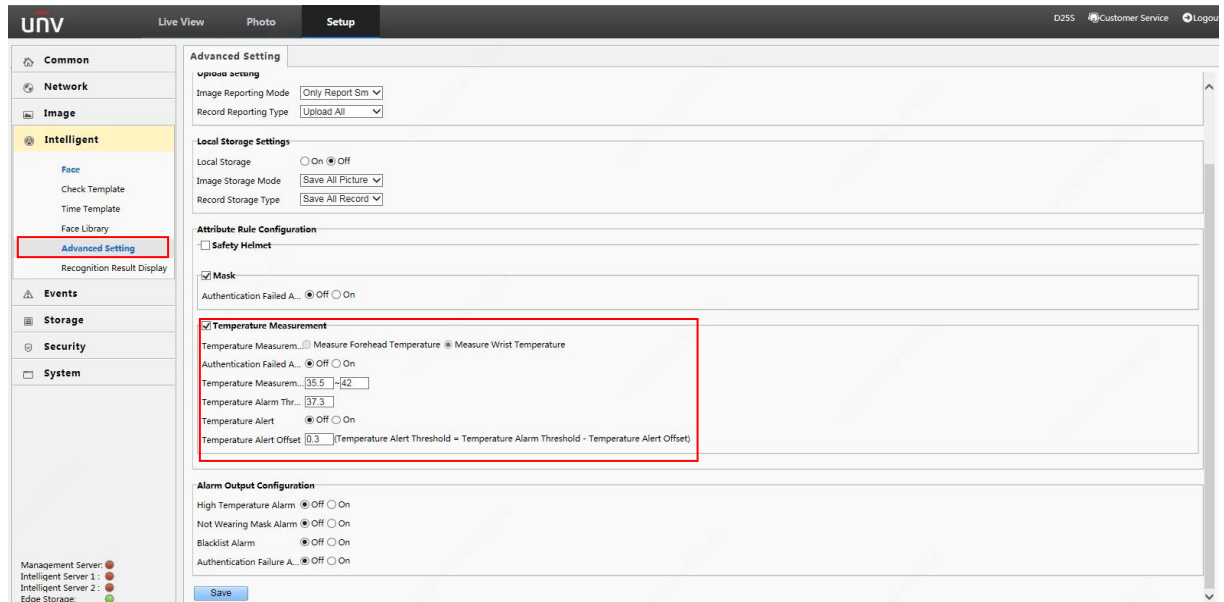

The screenshot shows the UNV Web interface with the 'Setup' tab selected. The left sidebar shows the 'Intelligent' category expanded, with 'Advanced Setting' highlighted. The main content area shows the 'Advanced Setting' configuration page. The 'Temperature Measurement' section is highlighted with a red box. It includes the following settings:


- Temperature Measurement:** ☒ (checked)
- Temperature Measurement Range:** 35.5 to 42
- Temperature Alarm Threshold:** 37.3
- Temperature Alert:** ☒ (checked)
- Temperature Alert Offset:** 0.3

The 'Alarm Output Configuration' section is also visible below the highlighted section, with settings for High Temperature Alarm, Not Wearing Mask Alarm, Blacklist Alarm, and Authentication Failure Alarm.

7.1.3 Enabling Mask Detection

Log in to the Web interface of the device, choose **Setup > Intelligent > Advanced Setting**, and select **Mask** in the **Attribute Rule Configuration** pane.

Figure 7-2 Enabling Mask Detection

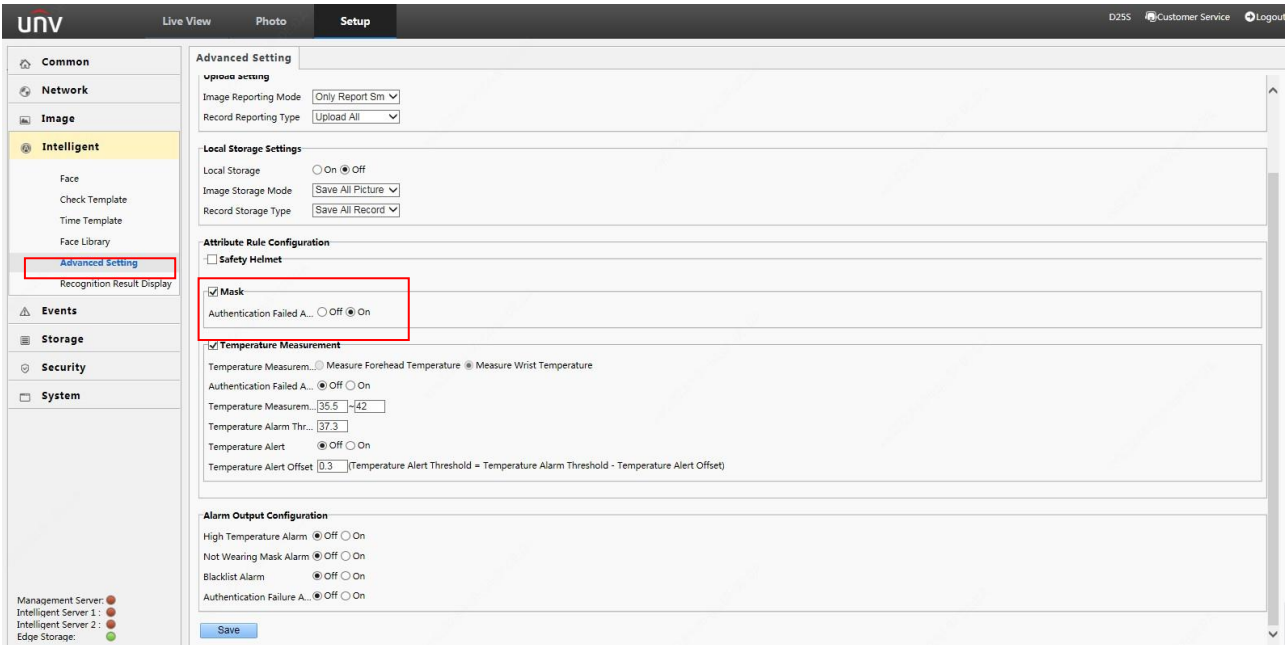


The screenshot shows the UNV Setup interface with the 'Advanced Setting' tab selected. The left sidebar lists various configuration categories: Common, Network, Image, Intelligent, Events, Storage, Security, and System. The 'Intelligent' category is expanded, showing options like Face, Check Template, Time Template, Face Library, and 'Advanced Setting' (highlighted with a red box). The 'Advanced Setting' section includes 'uppose setting' (Image Reporting Mode: Only Report Sm, Record Reporting Type: Upload All), 'Local Storage Settings' (Local Storage: On, Image Storage Mode: Save All Picture, Record Storage Type: Save All Record), 'Attribute Rule Configuration' (Safety Helmet: Off, Mask: checked, Authentication Failed A...: Off), 'Temperature Measurement' (Temperature Measur...: Measure Forehead Temperature, Authentication Failed A...: Off, Temperature Measur...: 35.5, Temperature Alarm Thr...: 37.3, Temperature Alert: Off, Temperature Alert Offset: 0.3), and 'Alarm Output Configuration' (High Temperature Alarm: Off, Not Wearing Mask Alarm: Off, Blacklist Alarm: Off, Authentication Failure A...: Off). A 'Save' button is at the bottom.

7.1.4 Configuring a Check Template

You can configure a check temperature to combinations such as face + mask + temperature, or ID card + mask + temperature.

When you set a check template to **None**, Temperature Measurement Only mode is adopted.

Figure 7-3 Configuring a Check Template

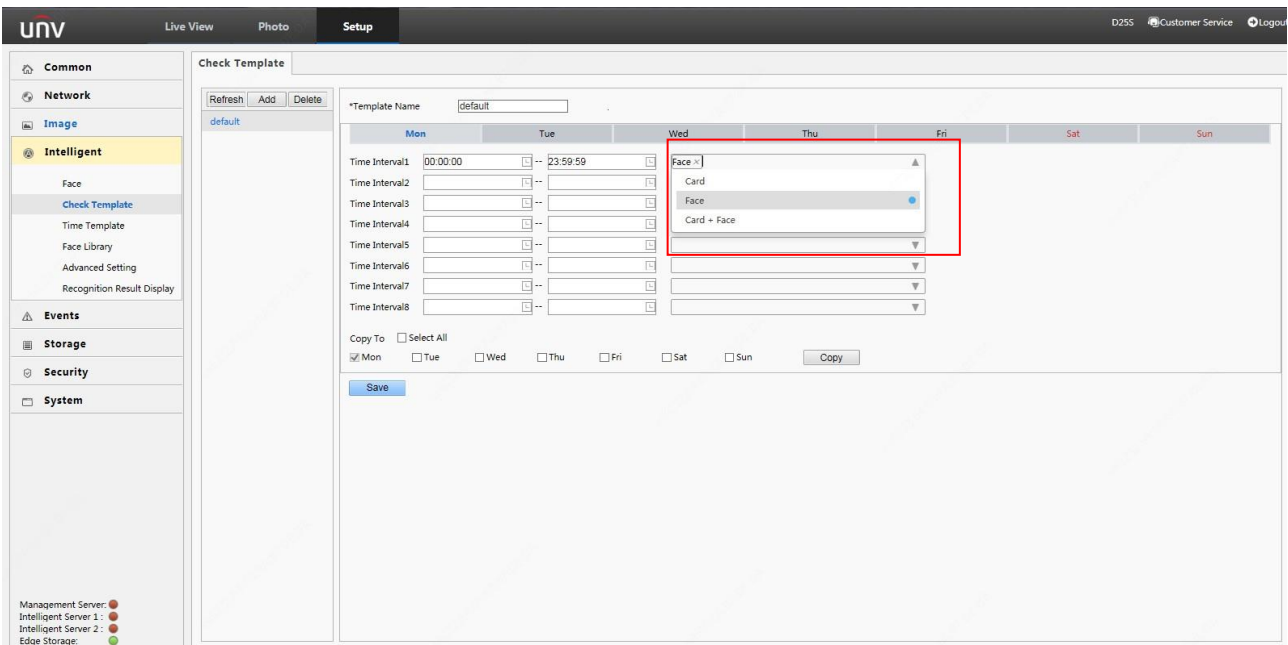


The screenshot shows the UNV Setup interface with the 'Check Template' tab selected. The left sidebar is the same as in Figure 7-2, with 'Check Template' highlighted under the 'Intelligent' category. The 'Check Template' section includes a 'Refresh Add Delete' button, a list of templates (default), and a table for configuring check templates. The table has columns for days of the week (Mon, Tue, Wed, Thu, Fri, Sat, Sun) and rows for Time Interval 1 through Time Interval 8. The 'Face + Face' option is selected in the dropdown menu for Time Interval 1, highlighted with a red box. Below the table, there are checkboxes for 'Copy To' (Mon, Tue, Wed, Thu, Fri, Sat, Sun) and a 'Copy' button. A 'Save' button is at the bottom.

7.2 Parameter Configuration on the GUI Touchscreen

Tap and hold the touchscreen, enter the password to go to the activation config interface, select **Authentication scene**, and choose a temperature measurement mode.

Note: Some models do not support parameter configuration on the GUI.

Figure 7-4 Configuring on the GUI

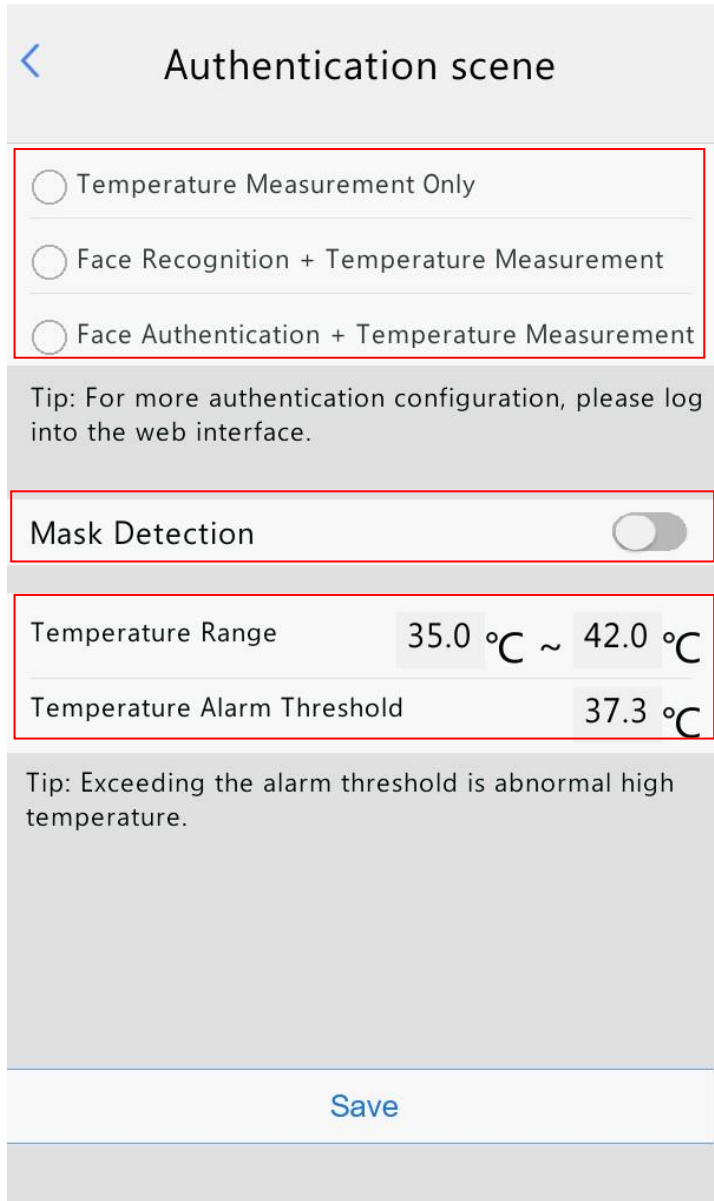

Authentication scene

- ☐ Temperature Measurement Only
- ☐ Face Recognition + Temperature Measurement
- ☐ Face Authentication + Temperature Measurement

Tip: For more authentication configuration, please log into the web interface.

Mask Detection ☐

Temperature Range 35.0 °C ~ 42.0 °C

Temperature Alarm Threshold 37.3 °C

Tip: Exceeding the alarm threshold is abnormal high temperature.

Save


- **Temperature Measurement Only:** pure temperature measurement mode
- **Face Recognition + Temperature Measurement:** face scan + temperature measurement mode
- **Face Authentication + Temperature Measurement:** face whitelist + temperature measurement mode
- Mask Detection
- Temperature value range: 35°C to 40°C

8 Appendix

8.1 Labels

The packing list contains temperature measurement hint labels, which directly tell users the temperature measurement point and distance. After installing the device, attach the label to a proper position of the temperature measurement module.

Figure 8-1 Labels

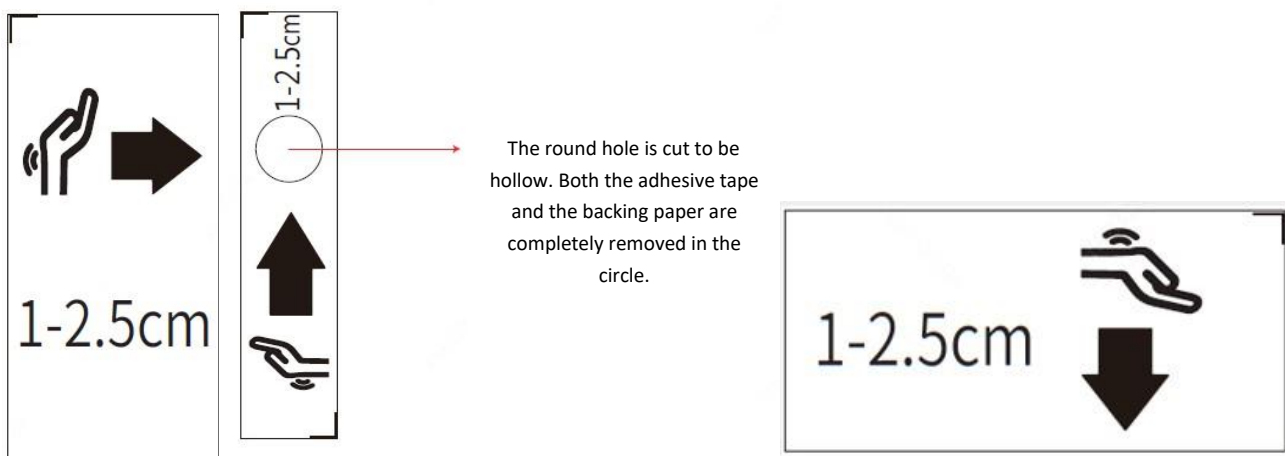

(1) No.	(2) Label Attaching Description	(3)
1	This label is applicable when the temperature measurement module is installed on a wall or standing pole. For details, see solution 2 in section "Wall Mount" and section "Standing Pole Mount".	
2	This label is applicable when the temperature measurement module is mounted on a wall and the temperature measurement point is outward. For details, see solutions 3 and 4 in section "Wall Mount".  NOTE! As shown in the figure above, the round film on the label aimed at the temperature measurement point must be removed when the label is attached.	


3	This label is applicable when the temperature measurement module is mounted on a wall and the temperature measurement point is downward. For details, see solution 1 in section "Wall Mount".
---	---

8.2 Standing Pole Bracket Slide

A standing pole bracket slide is optional, and the BOM code is 2115C0F3.

8.2.1 Dimensions of a Standing Pole Bracket Slide

Figure 8-2 Dimensions of an Expansion Bracket

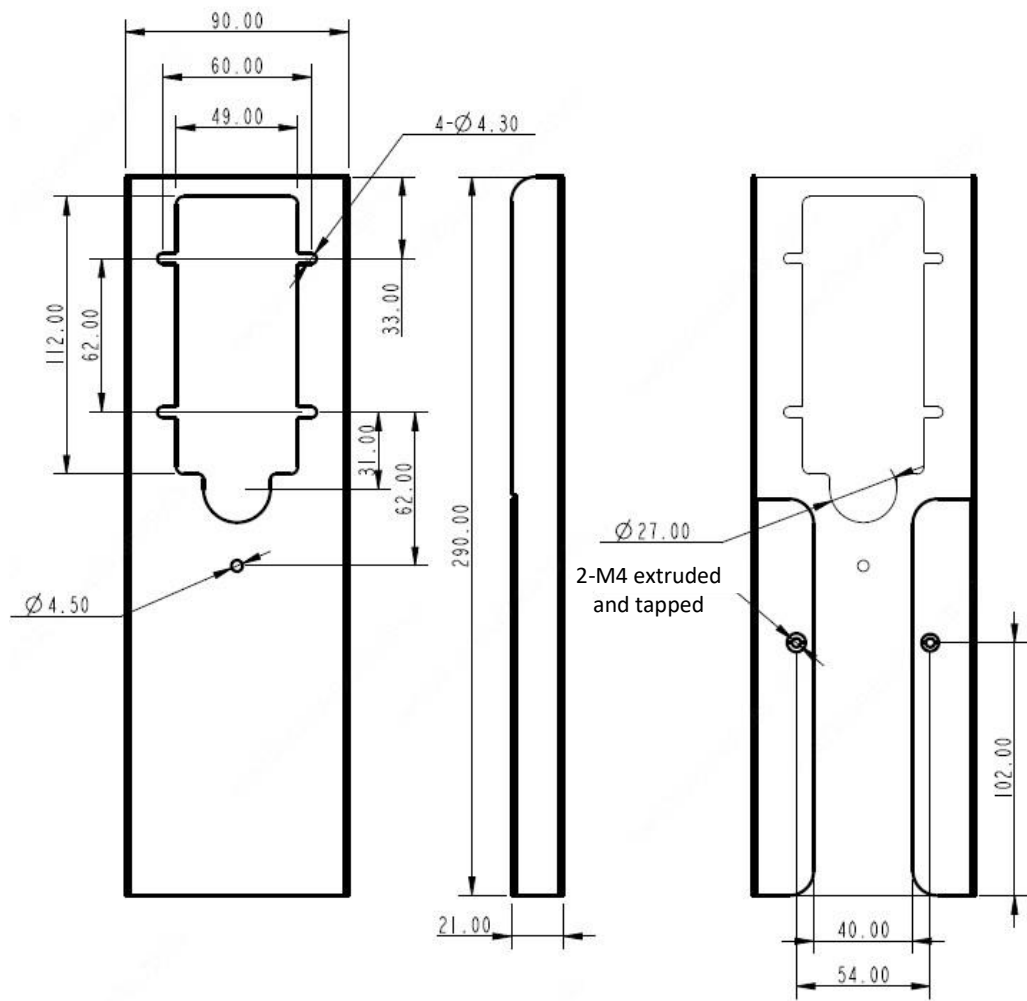

8.2.2 Installation Positions of a Standing Pole Bracket Slide

Note:

- Heights in the table are distances from the bottom of the pole to the top of the device, in the unit of meter.

2. For a 10-inch face recognition access control terminal, only positions +2 and +3 of the standing pole bracket slide are applicable.

Table 8-1 Face Recognition Access Control Terminal

Installation Position	+3 (+0.21m)	+2 (+0.15m)	+1 (+0.09m)	0 (Original position)	-1 (-0.02m)	-2 (-0.08m)	-3 (-0.14m)
7-inch face recognition access control terminal	1.418m	1.358m	1.298m	1.203m	1.179m	1.119m	1.059m
10-inch face recognition access control terminal	1.431m	1.371m	/	1.216m	/	/	/





Table 8-2 Face Recognition Terminal

Installation Position	+3 (+0.15m)	+2 (+0.09m)	+1 (+0.03m)	0 (Original position)	-1 (-0.03m)	-2 (-0.09m)	-3 (-0.15m)
Face recognition terminal	1.423m	1.363m	1.303m	1.268m	1.243m	1.183m	1.123m

8.2.3 Installation of the Standing Pole Bracket Slide for Face Recognition Access Control Terminal

The installation of the standing pole bracket slide for a 7-inch face recognition access control terminal is the same as that for a 10-inch face recognition access control terminal. This section describes the installation of the standing pole bracket slide for a 7-inch face recognition access control terminal.

Note: Operations in this section raise the height of the device. To lower the device, rotate the standing pole bracket slide by 180°, and perform the operations as the same.

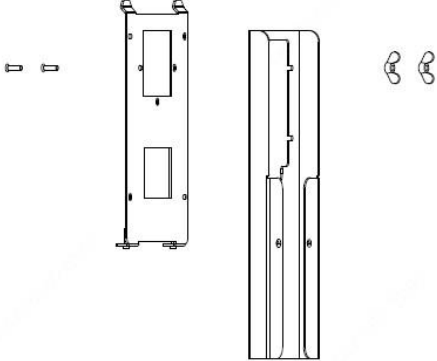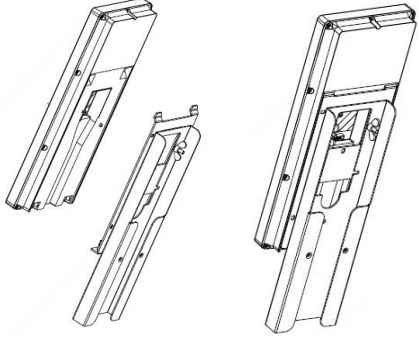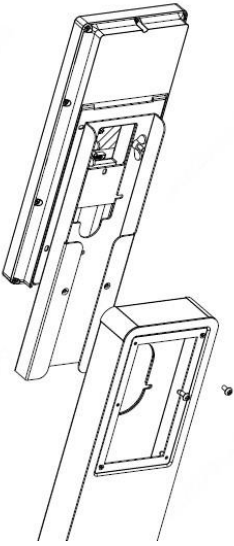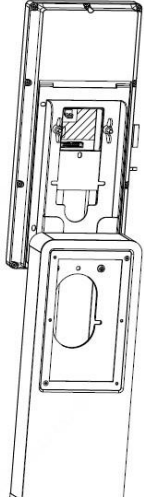Step 1 Fix the wall-mounted bracket. Screws: two M4x14 grub Phillips screws and two style-1 M4 hexagon nuts Operation: Use two grub screws and M4 nuts to fix the wall-mounted bracket of the access control terminal to the expansion bracket. 	Step 2 Fix the expansion bracket. Screws: two hex tamper screws supplied with the wall-mounted bracket Operation: Install the device to the combination bracket assembled in step 1, and tighten the two tamper screws at the bottom. 
Step 3 Fix the standing pole. Screws: two M4x8 Phillips pan head screws Operation: Use two M4 Phillips pan head screws to fix the combination assembled in step 2 to the standing pole. 	Step 4 Complete the installation. 


8.2.4 Installation of the Expansion Bracket for Face Recognition Terminal

Note: Operations in this section raise the height of the device. To lower the device, rotate the expansion bracket by 180°, and perform the operations as the same.

Step 1 Fix the device.

Screws: two M4x8 pan head screws


Operation: Pass the tail cables of the face recognition terminal through the expansion bracket, and use M4x8 pan head screws to install the terminal to the expansion bracket.

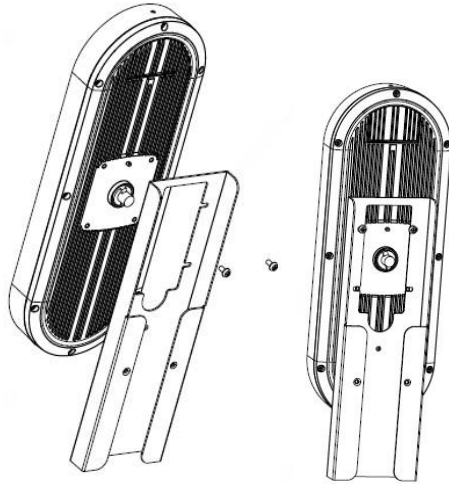


Step 2 Fix the standing pole.

Screws: two M4x8 pan head screws

Operation: Install the combination assembled in step 1 to the standing pole.

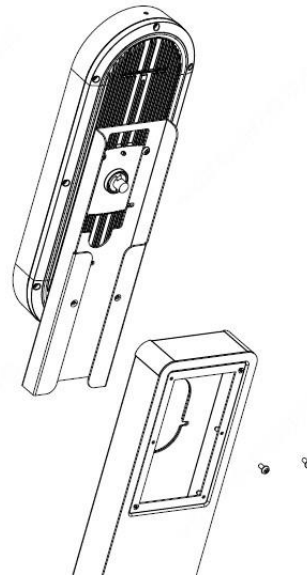

Step 3 Complete the installation.

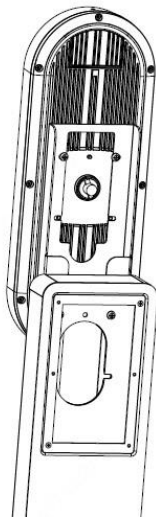

8.3 Standing Pole Bracket Base

A standing pole bracket base is optional, and the BOM code is 2115C0F4.

8.3.1 Dimensions of a Standing Pole Bracket Base

Figure 8-3 Dimensions of a Standing Pole Bracket Base


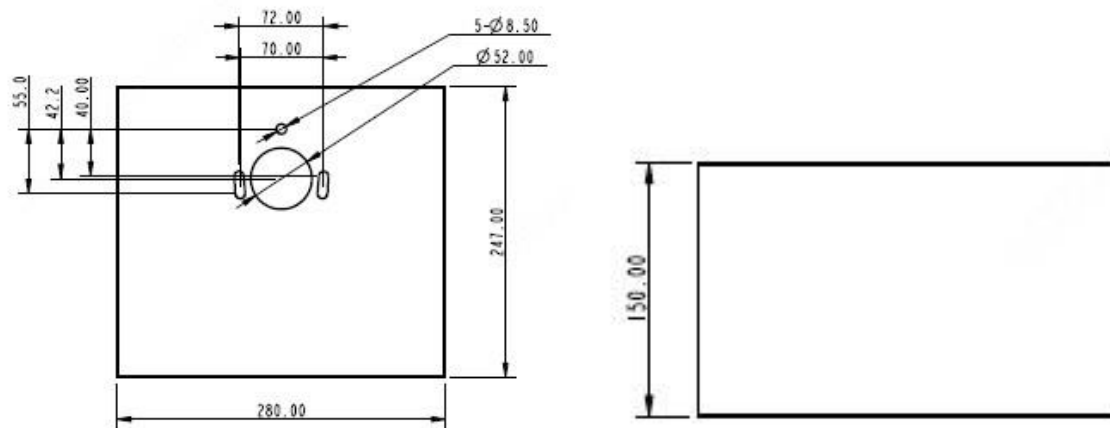


Figure 8-4 Base Mount Holes

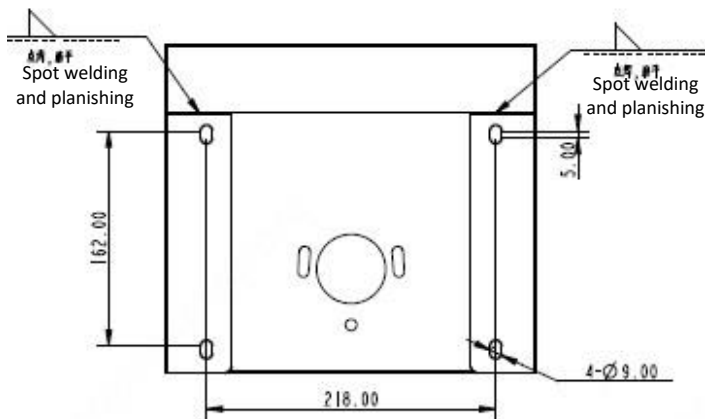


8.3.2 Installation of the Standing Pole Bracket Base

Step 1

Disassemble the cover at the bottom of the standing pole.

Operation: Use a Phillips screwdriver to disassemble the cover at the bottom of the standing pole.

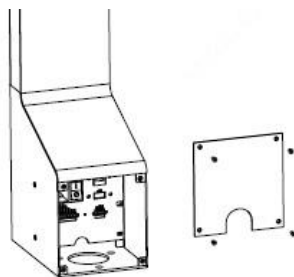


Step 2

Install the base.

Screws: three M8x15 hex socket screws

Operation: Use hex screws and caps to fix the standing pole to the base, and assemble the cover back to the bottom of the standing pole.

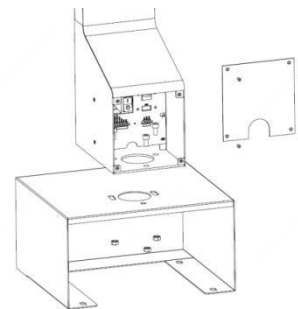

Step 3 Complete the installation.

Screws: four M8x80 expansion bolts

Operation: Fasten the expansion bolts and install the cover.

